
Framing Information: 44HH Corner (RS/LS) (Double Glass)



Framing Dimensions

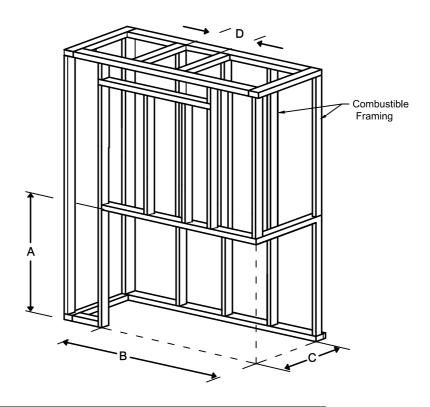

Model	А	В	С	D
44HH RS/LS	49 ½"	50 ¹⁵ / ₁₆ "	21 %"	Refer to Vent Manufacturer's Firestop Dimensions

 
Note: 1. Drawings are not to Scale

2. All dimensions in inches

3. No weight can be transferred to the fireplace. ALL FRAMING MUST BE SELF-SUPPORTED.

Page 1 of 3

Framing Information: 44HH Corner (RS/LS) (Double Glass) Framing Details Nailing flanges fold up and connect to the framing. ALL FRAMING MUST BE SELF-SUPPORTED. The fireplace must not bear any weight. Heat Release Heat Release 5/8" Type X Drywall on Framing Exterior 5/8" Type X Drywall on Framing Exterior Combustible Framing **Elevation View** Section View



Top View

The valve can be moved 36" from the center of the fireplace in any direction

(required for double glass only)

Note: 1. Drawings are not to Scale

Add drywall nailer as needed.


- 2. All dimensions in inches
- 3. No weight can be transferred to the fireplace. ALL FRAMING MUST BE SELF-SUPPORTED.

Page 2 of 3


Framing Information: 44HH Corner (RS/LS) (Double Glass)




Fireplace Dimensions

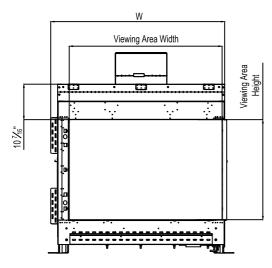

Front View

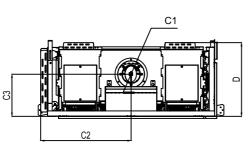

Top View

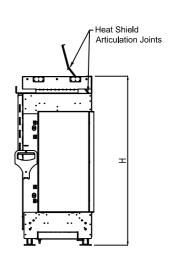

Side View

Heat Shield

Model	(H) (W) Height Width	(D)	C1	C2	C3	Viewing Area		
		Width	Depth	01	02		Front	Side
44HH RS/LS	49 ½"	50 ¹⁵ ⁄ ₁₆ "	21 ½"	7 1/8"	25 7/16"	12 ½ ₁₆ "	44 ¹³ / ₁₆ " W X 29 ½" H	14 ¹³ / ₁₆ " W X 29 ½" H

Protective Cover for doubleglass fans. Ships on double glass models only

Note: 1. Drawings are not to Scale

2. All dimensions in inches

Page 3 of 3